




UNIVERSITY OF GEORGIA EXTENSION

REVISED BY
UTTAM SAHA
PAMELA R. TURNER

ORIGINALLY WRITTEN BY
UTTAM SAHA
RICK SMITH
JAKE MOWRER
LETICIA S. SONON
PAMELA TURNER

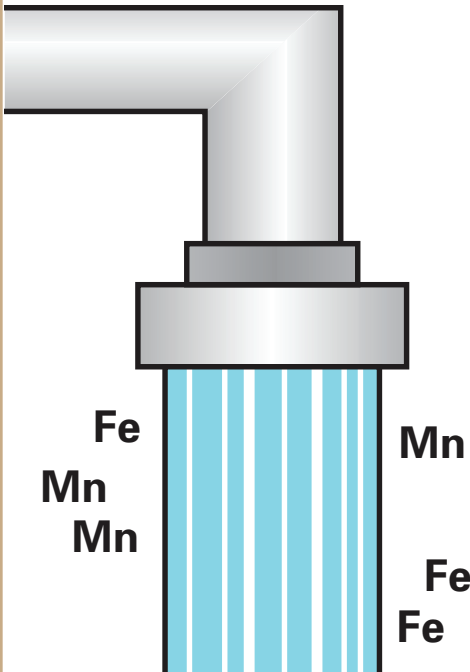


HOUSEHOLD
WATER
QUALITY
SERIES

11

YOUR HOUSEHOLD WATER QUALITY: IRON AND MANGANESE

Elevated levels of iron (Fe) and manganese (Mn) are two of the most common water quality problems in Georgia's groundwater (Figure 1). These problems occur statewide in wells that access both shallow and deep groundwater sources.

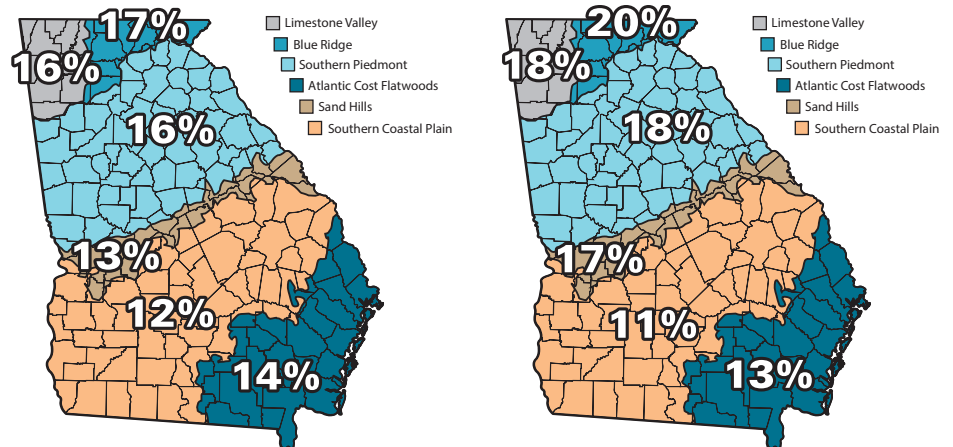

Iron (greater than 0.3 ppm)

Manganese (greater than 0.05 ppm)

* United States Environmental Protection Agency (EPA) categorized iron (Fe), manganese (Mn) and some others as secondary drinking water contaminants. **These contaminants in drinking water do not pose any human health risks but can cause offensive taste, odor, color, corrosivity, foaming, and staining.** They are regulated by EPA's Secondary Drinking Water Standards and the concentration limit is called the Secondary Maximum Contaminant Level (MCL). **The Secondary Drinking Water Standards are not enforceable.**

WHAT PROBLEMS ARE ASSOCIATED WITH HIGH IRON AND MANGANESE LEVELS?

Adverse health effects are not the main concern when household water contains high levels of iron and manganese. However, these metals can create an unsightly appearance, unpleasant taste, and staining of plumbing fixtures, porcelain, and laundry.

Iron (Fe) gives water a bitter, metallic taste; creates reddish-brown stains in sinks, fixtures, laundry, and toilets; and promotes the growth of iron bacteria in plumbing. Iron bacteria form slimy growths or gelatinous masses in plumbing and use the iron in the water as an energy source. When iron bacteria invade your well or plumbing they can become a serious problem, plugging filters and pump screens or causing an unsightly mess. The slimy or gelatinous mass of iron-bacteria colonies may also look like oil suspended in the water.

Manganese (Mn) also gives water a bitter and metallic taste; and it creates suspended specks, sediments, and stains, which are often observed in sinks, fixtures, laundry, and toilets. These may range from dark gray to black in color. Elevated manganese levels have also been described as causing diminished flavor and color of cooked food.

"Iron bacteria" can be a problem when iron concentrations are as low as 0.01 ppm, much lower than the concentration that causes stains!

Iron bacteria do not cause illness!

Both iron and manganese can be removed through treatment.

Element	Secondary MCL (mg/L or ppm) Staining is likely at this level
Iron (Fe)	0.30
Manganese	0.05

AT WHAT LEVEL OF IRON OR MANGANESE WILL STAINING OCCUR?

Before you have your water tested by a laboratory, you may see signs that the water contains iron or manganese. Plumbing fixtures will become stained reddish brown or dark gray to black. These stains will be difficult to remove with common household cleaners. Using chlorine bleach in combination with high iron levels in water will permanently stain laundry.

WHY ARE IRON AND/OR MANGANESE IN MY WELL WATER?

Groundwater environments are generally low in oxygen. Iron- and manganese-containing minerals in soils, rocks, and sediments dissolve more rapidly in such low-oxygen conditions. This natural release process of iron and manganese into the ground water is not considered contamination, but is the inherent nature of some groundwater. As this water is pumped to the surface and exposed to oxygen, the process will reverse and the dissolved iron and manganese will precipitate or come out of the water forming colored sediment.

It is helpful to identify the type of contamination present in your household water through simple observation. Here are some tips for identifying iron and manganese contamination in household water:

- **FERROUS IRON:** The reduced form of iron is present in an oxygen-free environment, such as ground water. This form of iron is water soluble and colorless. The water appears to be clear when first drawn, but upon standing, rust colored particles settle to the bottom.
- **FERRIC IRON:** The oxidized form of iron that forms reddish-brown insoluble precipitates. Water with a reddish-brown or rusty color to it comes straight from the faucet. Reddish-brown precipitates of ferric iron instantly settle to the bottom.
- **IRON BACTERIA:** Slimy brown, red, dark gray, or black film occurs on the plumbing fixtures and/or gelatinous sludge develops in the pipes. Chunks of this slime sometimes dislodge from pipes producing colored water.
- **MANGANESE:** Manganese sediment is dark gray or black.

WHAT SHOULD I DO TO IF I SUSPECT I HAVE HIGH IRON AND/OR MANGANESE IN MY WELL WATER?

It is recommended that you begin with a basic water test through your county Extension office. Because it may be necessary to sample for iron in water at the wellhead, as opposed to an indoor faucet, consulting your Extension agent prior to sampling is the preferred first step.

Manganese removal is more straightforward than iron removal, though the two problems frequently occur together. The oxidation process that causes manganese and iron to stain your plumbing and laundry may also be used to remove these elements from your drinking and cleaning water. Physical treatments (aeration pumps) or chemical treatments (chlorine bleach, green sand – permanganate) may be used to oxidize manganese, causing it to form a sediment that can be removed by filtration. Water softeners (ion exchange) are another alternative. However, water softeners may only be effective up to 5 ppm of combined iron and manganese. Oxidation can also be effective in removing iron from household water; however, based on your observations and the results of a basic water test, the most appropriate treatment system can be prescribed. For example:

- Ferrous iron: Oxidation is required.
- Ferric iron: Filtration may suffice are required.

Further details on treatment systems are provided in UGA Extension Bulletin 939, "Water Quality and Common Treatments for Private Drinking Water Systems," available at your local Extension office and online at extension.uga.edu/publications/detail.cfm?number=B939

When the presence of iron bacteria is observed, oxidation by chlorination is the preferred treatment because it both kills iron-bacteria and removes the iron. The level of iron or manganese in your water can be used to determine the type of treatment that is best for your situation. Treatment systems can then be properly sized, installed, and maintained.

Further details on treatment systems are provided in UGA Extension Bulletin 939, "Water Quality and Common Treatments for Private Drinking Water Systems," available at your local Extension office and online at extension.uga.edu/publications/detail.cfm?number=B939.

We recommend that you contact a certified water treatment professional to discuss these treatment options. Look for National Sanitation Foundation International (www.nsf.org) or Water Quality Association (www.wqa.org) certified treatment systems. Certification by one of these two organizations generally assures that the product will perform as specified.

